



XS WIRELESS 2

Quick Guide | Kurzanleitung | Guide rapide | Guida rapida | Guía de inicio rápido | Guia rápido | Beknopte handleiding | Krótka instrukcja obsługi | Snabbguide | Kort vejledning | Πίνακας οδηγιών | Kısa Kılavuz | Краткая инструкция | 快速指南 | 快速使用指南 | クイックガイド | 요약 설명서

In the box	Vocal Sets		Instrument Set	Lavalier Set	Headmic Set
XS WIRELESS 2	XSW 2-835	XSW 2-865	XSW 2-CI1	XSW 2-ME2	XSW 2-ME3
EM-XSW 2 NT 12-5CW	•	•	•	•	•
SKM 835-XSW	•	•	•	•	•
MZQ 1 SKM 865-XSW	•	•	•	•	•
SK-XSW	•	•	•	•	•
ME 2-2	•	•	•	•	•
ME 3-II	•	•	•	•	•
CI 1-N	•	•	•	•	•
2 x AA LR6 1.5 V	•	•	•	•	•

Battery

Low battery

Bank	Ch	Estimate
1	1	~ 10 h
2	1	~ 7 h
3	1	~ 3 h

Low Batt

Setup

Line Mic

XLR-3

6.3 mm

OR

EU US UK AU CN KOR

ME 2-2

ME 3-II

CI 1-N

On/Off

1s on
3s off

OR

Display

Radio frequency level

Audio level

Frequency

Diversity

Menu

Sync

Battery

Bank

Channel

Volume

Mute

Audio on

Audio off

Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany, www.sennheiser.com
Printed in Germany, Publ. 02/17, 571344/A03

SENNHEISER

Change frequency

Scan mode

SET

606.500 MHz
B. 1 CH. 01
ANT TUNE PRESET SCAN SYNC

⚠ SKM/SK Off!

+ Bank
- Bank

SET

615.400 MHz
B. 2 CH. 03
ANT TUNE PRESET SCAN SYNC

Preset mode

SET

606.500 MHz
B. 1 CH. 01
ANT TUNE PRESET SCAN SYNC

+ Bank
- Bank

SET

606.500 MHz
B. 2 CH. 01
ANT TUNE PRESET SCAN SYNC

+ Channel
- Channel

SET

615.400 MHz
B. 2 CH. 03
ANT TUNE PRESET SCAN SYNC

Tune mode

SET

606.000 MHz
B. 1 CH. 00
ANT TUNE PRESET SCAN SYNC

+ 25 kHz
- 25 kHz


SET

606.025 MHz
B. 1 CH. 00
ANT TUNE PRESET SCAN SYNC


Bank 1 only!

Sensitivity


- 0 dB
- 10 dB
- 20 dB
- 30 dB

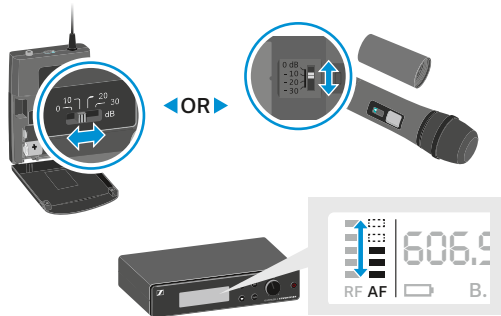


ME 2-2

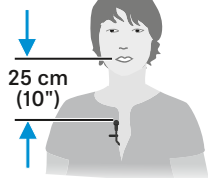


ME 3-II

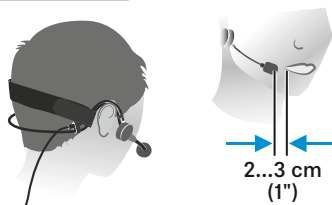

Squelch

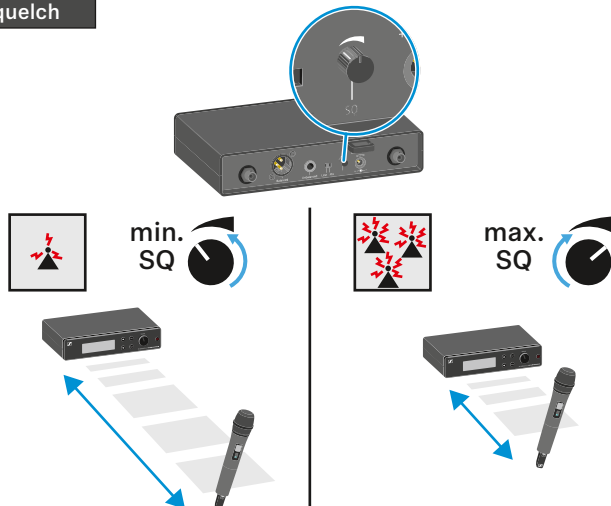

Sync

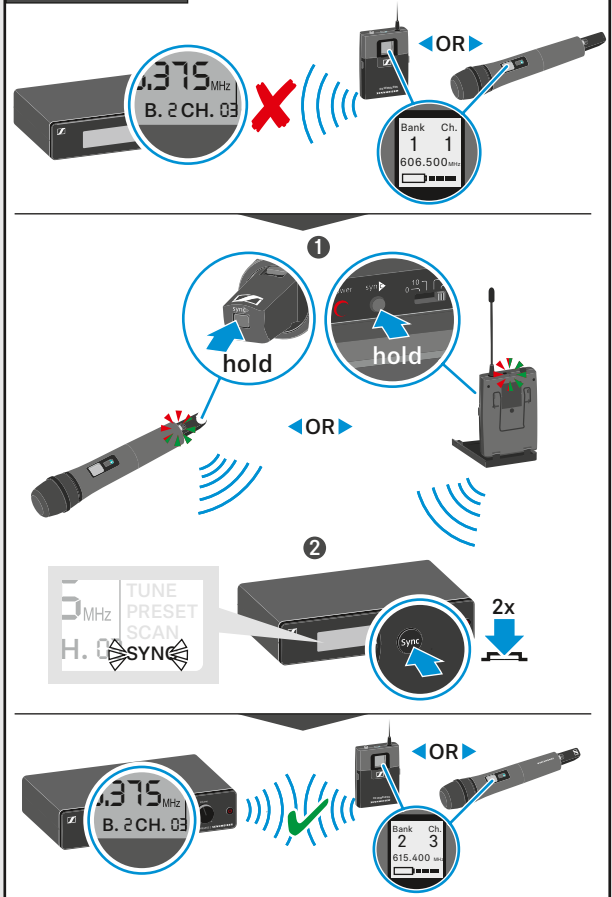


Multichannel


Bank 1...8; U
CH. 01...12

Bank	CH.	Bank	CH.	Bank	CH.	Bank	CH.	
2	3	2	4	2	5	2	6	✓
1	1	1	2	1	3	1	8	✓
2	3	1	3	4	7	8	9	✗
2	3	2	3	2	3	2	3	✗

Min. distance

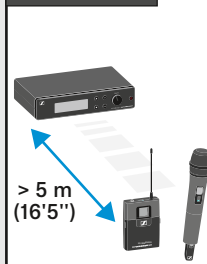

SKM

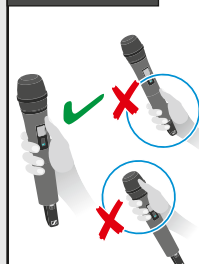

Guitar pickup

