



XS WIRELESS 2

Quick Guide | Kurzanleitung | Guide rapide | Guida rapida | Guía de inicio rápido | Guia rápido | Beknopte handleiding | Krótka instrukcja obsługi | Snabbguide | Kort vejledning | Pikaohje | Γρήγορος οδηγός | Kisa Kilavuz | Краткая инструкция | 快速指南 | 快速使用指南 | クイックガイド | 요약 설명서

In the box	Vocal Sets		Instrument Set	Lavalier Set	Headmic Set
	XSW 2-835	XSW 2-865	XSW 2-CI1	XSW 2-ME2	XSW 2-ME3
XS WIRELESS 2					
EM-XSW 2 NT 12-5CW	•	•	•	•	•
SKM 835-XSW MZQ 1	•	○	○	○	○
SKM 865-XSW	○	•	○	○	○
SK-XSW	○	○	•	•	•
ME 2-2	○	○	○	•	○
ME 3-II	○	○	○	○	•
CI 1-N	○	○	•	○	○
2 x AA LR6 1.5 V	•	•	•	•	•

Battery

- Slide the battery cover open.
- Insert the AA battery with the correct polarity.
- Slide the cover closed.

Low battery

~ 10 h
~ 7 h
~ 3 h
Low Batt

Setup

Line Mic
XLR-3
6.3 mm
EU US UK AU CN KOR

ME 2-2
ME 3-II
CI 1-N

On/Off

1s on
3s off

Display

Audio level Frequency Diversity
Radio frequency level 606.500 MHz
Menu Sync
Battery Bank Channel

Volume


Mute

Audio on
Audio off

Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany, www.sennheiser.com
Printed in Germany, Publ. 02/17, 571344/A03

Change frequency



SET

Scan mode

606.500 MHz
ANT TUNE PRESET SCAN SYNC
B. 1 CH. 01

+ Bank
- Bank

SET

615.400 MHz
ANT TUNE PRESET SCAN SYNC
B. 2 CH. 03

SET

SET

Preset mode

606.500 MHz
ANT TUNE PRESET SCAN SYNC
B. 1 CH. 01

+ Bank
- Bank

SET

606.500 MHz
ANT TUNE PRESET SCAN SYNC
B. 2 CH. 01

+ Channel
- Channel

SET

615.400 MHz
ANT TUNE PRESET SCAN SYNC
B. 2 CH. 03

SET

SET

Tune mode

606.000 MHz
ANT TUNE PRESET SCAN SYNC
B. U CH. 00

+ 25 kHz
- 25 kHz

SET


606.025 MHz
ANT TUNE PRESET SCAN SYNC
B. U CH. 00

SET

SKM/SK Off!

Bank U only!

Sync

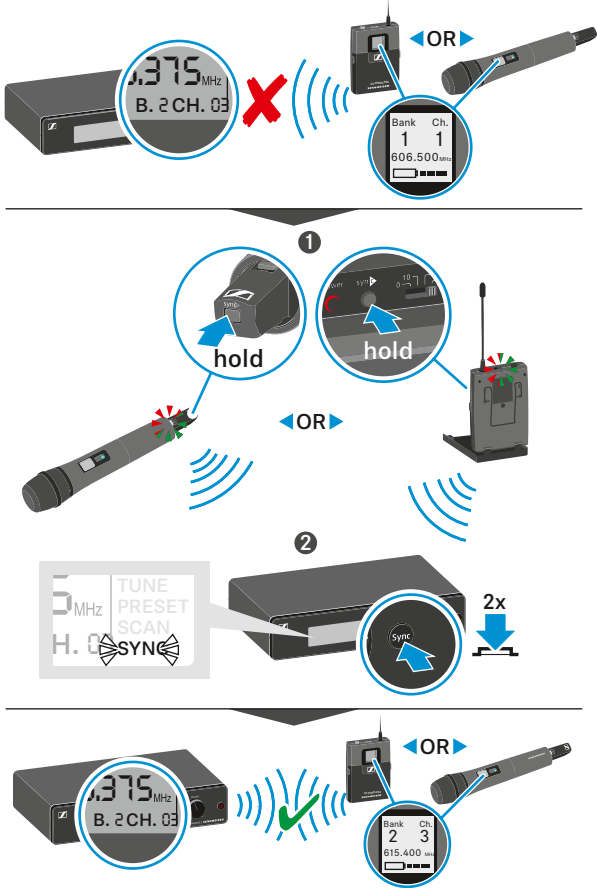

1. hold

2. Sync


2x

Bank 1 Ch. 1
606.500 MHz

Bank 2 Ch. 3
615.400 MHz

Sensitivity


0 dB
-10 dB
-20 dB
-30 dB

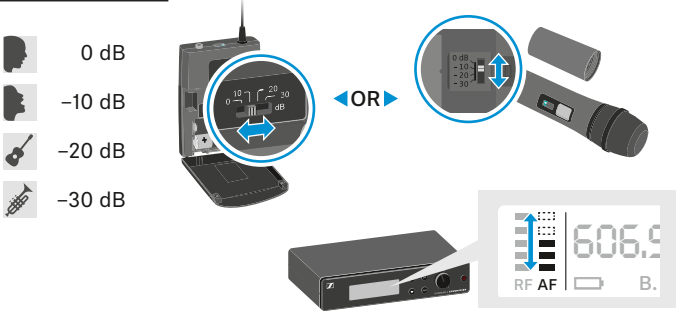

RF AF B.


ME 2-2

25 cm (10")

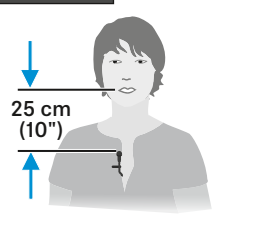

ME 3-II


2...3 cm (1")

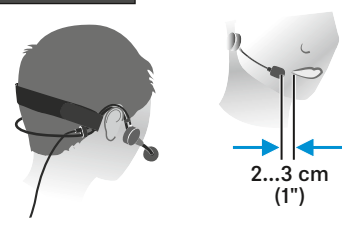

Squelch

min. SQ

max. SQ

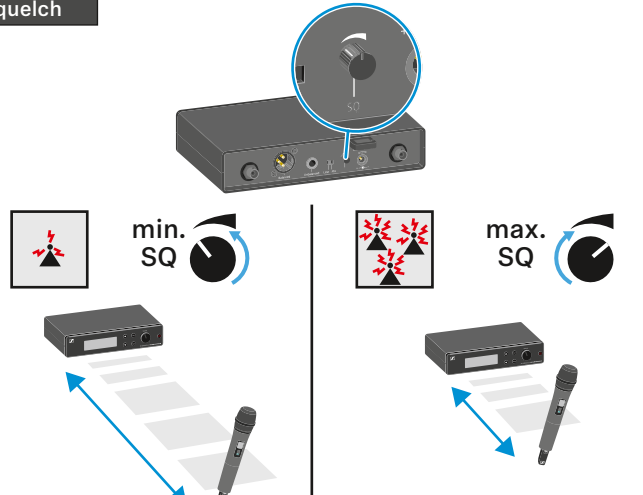

Multichannel


Bank 1...8; U
CH. 01...12

max. 12 CH.


Bank	CH.	Bank	CH.	Bank	CH.	Bank	CH.	
2	3	2	4	2	5	2	6	✓
1	1	1	2	1	3	1	8	✓
2	3	1	3	4	7	8	9	✗
2	3	2	3	2	3	2	3	✗

Min. distance

> 5 m (16'5")

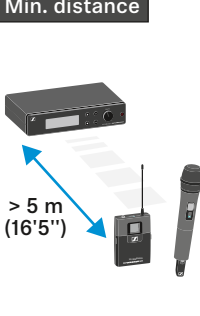

SKM

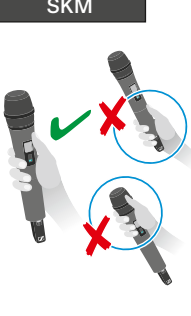

Guitar pickup

> 20 cm (8")

